

Brake Caliper Adjustment

Brake caliper housing with integral parking brake on the rear axle.

To ensure that the parking brake works perfectly,

- ✓ when a new brake caliper is fitted, and
- ✓ every time the brake pads are replaced the piston must be adjusted as described below:

Removal:

- ✓ Release / unclip the handbrake cable
- ✓ Remove screw plug (a) – see **Fig. 1**
- ✓ Slacken the hexagon socket screw (**Fig. 2**). Withdraw the piston until it stops moving.

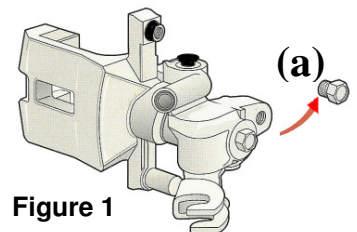


Figure 1

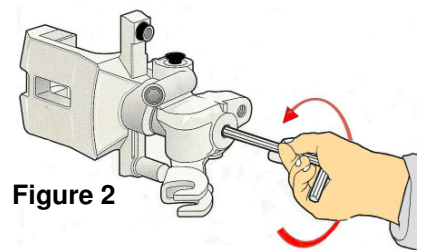


Figure 2

Installation:

- ✓ Screw in the hexagon socket screw in a clockwise direction (**Figure 3**) until the brake shoes touch the brake disc and the brake disc becomes difficult to turn.
- ✓ Then slacken the adjuster screw by one third to half of a turn
- ✓ (Brake disc will turn easily – see **Fig. 4**).
- ✓ Screw in and tighten screw plug (1) – **Fig. 5**.
- ✓ Attach brake cable and adjust it in accordance with the manufacturer's instructions.

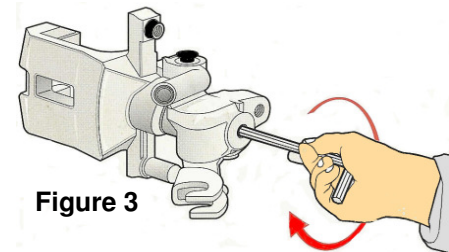


Figure 3

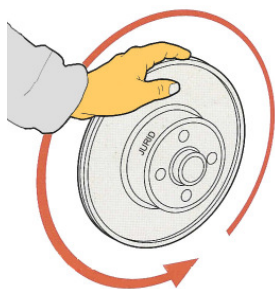


Figure 4

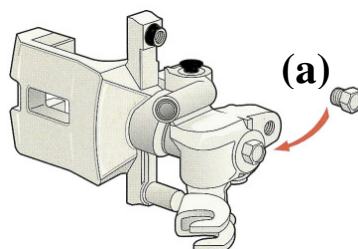


Figure 5

